


# INSTANTLOCK 2 FOUNDATION EQUIPMENT



PART #	DESCRIPTION	WEIGHT (LBS.)	MAXIMUM SUPPORTED LOADS (LBS.)
BSIB06	6' Foundation I-Beam	78	5,500
Bchair	Static Ladder Chair	16.5	5,500
BSAVC	Adjustable Vee Chair	19.5	5,500
BSF1	12" Founding Ladder	13.4	5,500
BSF3	36" Founding Ladder	29.1	5,500
BSF5	60" Founding Ladder	44.5	5,500
BSF6	72" Founding Ladder	48.5	5,500
BSFS	Founding Ladder Starter	7.5	5,500
BSSB10	10' Saddle Brace	17.5	5,500

Third-party manufactured components. Data may vary.

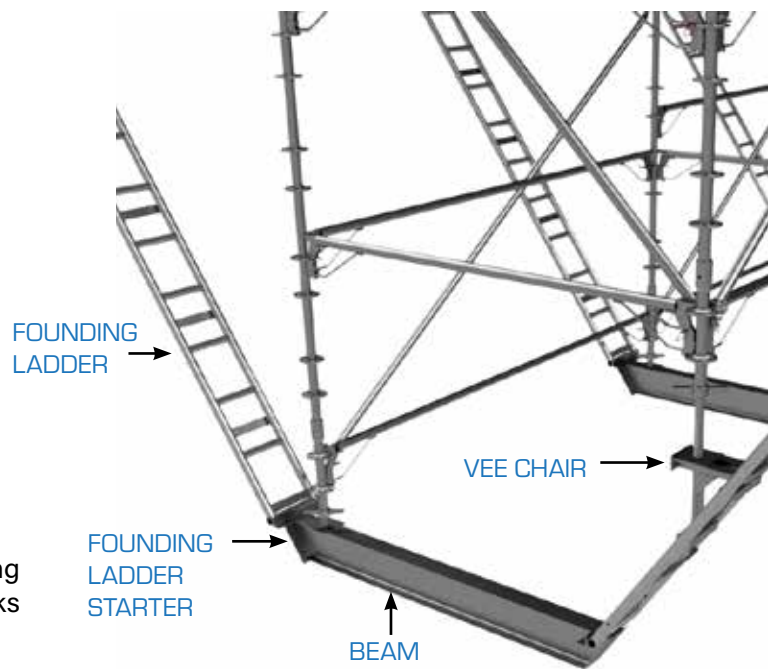

Founding ladder vee chairs are attached to the founding ladders and provide a level surface for the leveling jacks to rest.

Founding ladders rest on the slope of the boiler tubes and the foundation beams.

## BUILD NOTES:

1. All OSHA and plant regulations governing safety shall be followed, whichever is stricter.
2. The area supporting the foundation beams must be able to handle the required imposed loads.
3. Attached equipment (i.e. verticals, etc.) may be the load limiting factor.

**All material must be inspected prior to use! See inspection guidelines on page 87.**